

# TARZAN II PLUS

V.307US

## 1. DIP SWITCH SETTING

DIP SW. 1		1	2	3	4	5	6	7	8
ID NUMBER	1-20	FOR LINKING USE ONLY.							
PC BOARD MODE	SINGLE								OFF
	LINKING								ON
DIP SW. 2		1	2	3	4	5	6	7	8
CONNECTION DIAGRAM	36+10	OFF							
	28 PINS	ON							
ODDS TABLE	NO		OFF						
	YES		ON						
DEMO SONG	NO			OFF					
	YES			ON					
BACK COLOR	BLACK				OFF				
	COLOR				ON				
PASSWORD	NO					OFF			
	YES					ON			
W-UP GAME	NO						OFF		
	YES						ON		
PAYOUT SELECT	HOPPER							OFF	
	TICKET							ON	
PAYOUT MODE	NORMAL								OFF
	AUTO								ON
DIP SW. 3		1	2	3	4	5	6	7	8
PANEL FOR 36+10	MODE 1	OFF							
	MODE 2	ON							

## 2. SYSTEM ADJUSTMENT:

ITEM	CONTENT	Default
MAX. PLAY	5, 10, 20, 40, 50, 100, 200, 300	40
MIN. PLAY	1, 5, 8, 10, 20, 40, 50, 100	1
COIN RATE		5
KEY IN RATE	1, 2, 4, 5, 10, 15, 20, 25, 40, 50, 60, 75, 80, 100,	10
KEYOUT RATE	200, 250, 400, 500, 1000	1
TICKET RATE		100
SYSTEM LIMIT	LIMIT, UNLIMIT	LIMIT

## 3. CHANCE ADJUSTMENT:

ITEM	CONTENT	Default
MAIN GAME	40%, 45%, 50%, 55%, 60%, 65%, 70%, 75%, 80%, 85%	55%
W-UP GAME	70%, 80%, 90%	80%

## CONNECTION DIAGRAM 36+10

PARTS SIDE-MODE 1	PARTS SIDE MODE 2	SOLDER SIDE
VIDEO - RED	VIDEO - RED	1 VIDEO-GREEN
VIDEO - BLUE	VIDEO - BLUE	2 VIDEO-SYNC
SPEAK	SPEAK	3 GND
+5V	+5V	4
		5
		6
		7
		8
START   1/2 W-UP	START   2 W-UP	9
STOP 3   SMALL	STOP 2   LOW	10
ALL STOP   PLAY   2W-UP	STOP 4   PLAY   1/2 W-UP	11
STOP 1   TAKE	STOP 3   TAKE	12
STOP 4   W-UP	STOP 1   W-UP	13
		14
		15
STOP 2   BIG	ALL STOP   HIGH	16
		17
COIN A	COIN A	18 KEY IN
		19 COIN C
RECORD	RECORD	20 TEST
PAYOUT	PAYOUT	21 KEYOUT
		22 HOPPER   TICKET SW.
COIN A COUNTER	COIN A COUNTER	23
KEY IN COUNTER	KEY IN COUNTER	24
		25
COIN C COUNTER	COIN C COUNTER	26
HOPPER COUNTER	HOPPER COUNTER	27 TICKET SSR
KEYOUT COUNTER	KEYOUT COUNTER	28
LAMP: START   1/2 W-UP	LAMP: START   2 W-UP	29
LAMP: STOP 3   SMALL	LAMP: STOP 2   LOW	30
LAMP: ALL STOP   PLAY   2 W-UP	LAMP: STOP 4   PLAY   1/2 W-UP	31
LAMP: STOP 1   TAKE	LAMP: STOP 3   TAKE	32
LAMP: STOP4   W-UP	LAMP: STOP1   W-UP	33
LAMP: STOP2   BIG	LAMP: ALL STOP   HIGH	34
ATTENDANT	ATTENDANT	35
GND	GND	36 GND
GND	GND	1 GND
GND	GND	2 GND
+5V	+5V	3 +5V
+5V	+5V	4 +5V
+12V	+12V	5 +12V
		6
HOPPER SSR	HOPPER SSR	7
		8
GND	GND	9 GND
GND	GND	10 GND

## Connection Diagram for 28 PINS

PARTS SIDE	SOLDER SIDE
GND	1 GND
GND	2 GND
+5V	3 +5V
+5V	4 +5V
	5
+12V	6 +12V
	7
KEYIN COUNTER	8 KEYOUT COUNTER
HOPPER SSR	9 COIN COUNTER
SPEAKER (+)	10 SPEAKER (-)
HP SW	11
VIDEO RED	12 VIDEO GREEN
VIDEO BLUE	13 VIDEO SINC
VIDEO GND	14 TEST
RECORD	15 KEY OUT
COIN A	16
TICKET SW	17 TICKET SSR
STOP3   LOW   1/2 W-UP	18 LAMP: STOP3   LOW   1/2W-UP
STOP4   W-UP	19 LAMP: STOP4   W-UP
STOP2   HIGH   2 W-UP	20 LAMP: STOP2   HIGH   2 W-UP
STOP1   TAKE	21 LAMP: STOP1   TAKE
PAYOUT	22 LAMP: PAYOUT
START	23 LAMP: START
ALL STOP   PLAY	24 LAMP: ALL STOP   PLAY
KEYIN	25
HOPPER COUNTER	26
GND	27 GND
GND	28 GND