

# Talking SKILL CHERRY '97™ ©1997 Amuchine® (with 2 Skill Hold)


## TICKET DISPENSER DIRECT DRIVE (NO INTERFACE BOARD REQUIRED)

With "Ticket Empty" Detection Ability and MORE NEW FEATURES (see other pages, total 5)


Two types of boards are used. Check position of dip switches.

TYPE A BD (NOT USED FOR SKILL CHERRY '97)

	PARTS SIDE		SOLDER SIDE	
1	VIDEO RED		VIDEO GREEN	1
2	VIDEO BLUE		VIDEO SYNC	2
3	SPEAKER +		SPEAKER -	3
4				4
5				5
6				6
7	Ticket Out Button-on panel			7
8	Ticket Notch-from dispenser			8
9	START			9
10	SMALL/STOP 2			10
11	PLAY			11
12	TAKE/STOP3/HOLD 1			12
13	DOUBLE/STOP 1			13
14				14
15				15
16	BIG/ALL STOP/HOLD 2			16
17				17
18	COIN IN		NOTE IN	18
19	SERVICE IN			19
20	ACCOUNT		CONFIRM	20
21	Hopper Pay		CLEAR SWITCH	21
22			Hopper Switch	22
23	COIN IN METER			23
24	NOTE IN METER		Hopper SSR B	24
25				25
26				26
27	Hopper Meter			27
28	CLEAR TICKET METER			28
29	START LAMP			29
30	SMALL/STOP 2 LAMP			30
31	PLAY LAMP			31
32	TAKE/STOP 3 LAMP			32
33	DBL/STOP 1 LAMP			33
34	BIG/ALL STOP LAMP			34
35				35
36	GND		GNG	36

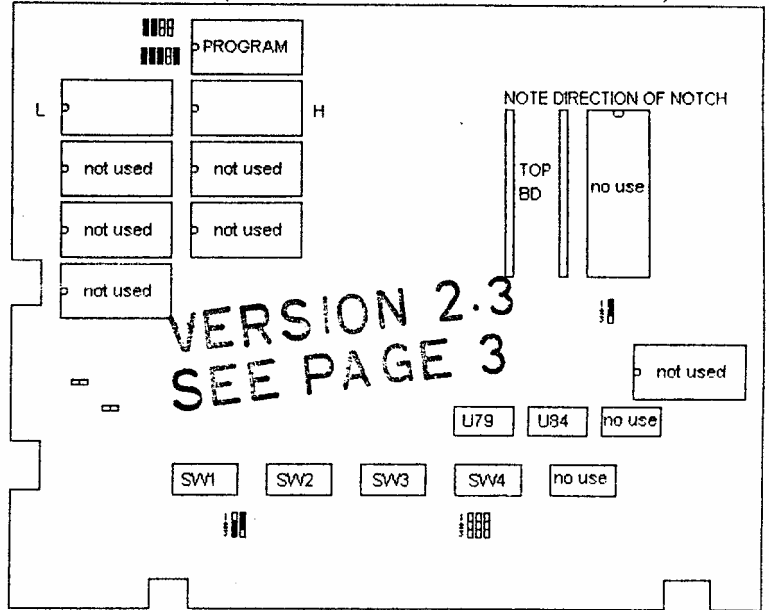

U79=U19 U84=U20

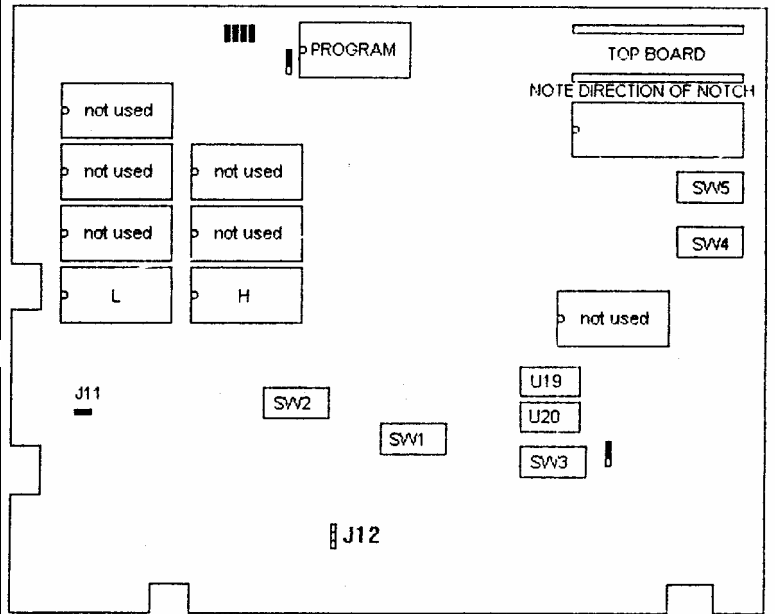


TYPE B BD WITH J12 JUMPER (Revised for SC97)

Note: Type B Board with J12 Jumper. J12 is for selection of Ticket Dispenser Enable or Hopper SSR.

Please see "Ticket Dispenser Direct Drive Connection Diagram."



BIG

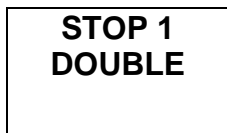

DOUBLE



SMALL



TAKE



PLAY



START

# Talking SKILL CHERRY '97™ ©1997 Amuchine® (with 2 Skill Hold)

DIP SW 1		1	2	3	4	5	6	7	8
GAME PERCENTAGE (Level Of Difficulty)	55% Level 8	OFF	OFF	OFF					
	60% Level 7	ON	OFF	OFF					
	65% Level 6	OFF	ON	OFF					
	70% Level 5	ON	ON	OFF					
	75% Level 4	OFF	OFF	ON					
	80% Level 3	ON	OFF	ON					
	85% Level 2	OFF	ON	ON					
90% Level 1	ON	ON	ON						
MAXIMUM PLAY	8				OFF	OFF	OFF		
	16				ON	OFF	OFF		
	24				OFF	ON	OFF		
	32				ON	ON	OFF		
	40				OFF	OFF	ON		
	48				ON	OFF	ON		
	64				OFF	ON	ON		
80	ON	ON	ON						
MINIMUM PLAY FOR BONUS	8							OFF	OFF
	16							ON	OFF
	24							OFF	ON
	32							ON	ON

DIP SW 2		1	2	3	4	5	6	7	8	
DOUBLE GAME	NO	OFF								
	YES	ON								
SKILL TIME SPINNING	NO		OFF							
	YES		ON							
COIN IN	1			OFF	OFF	OFF				
	2			ON	OFF	OFF				
	4			OFF	ON	OFF				
	5			ON	ON	OFF				
	10			OFF	OFF	ON				
	20			ON	OFF	ON				
	25			OFF	ON	ON				
100	ON	ON	ON							
NOTE IN	100						OFF	OFF		
	200						ON	OFF		
	500						OFF	ON		
	1000						ON	ON		
<b>WARNING: THIS SWITCH MUST ALWAYS BE OFF</b>									OFF	

DIP SW 3		1	2	3	4	5	6	7	8
MIN PLAY TO START	1	OFF	OFF						
	8	ON	OFF						
	16	OFF	ON						
	24	ON	ON						
MAX COIN IN & NOTE IN POINT (no more coin/note in but Not affect win points)	1000			OFF	OFF				
	5000			ON	OFF				
	10000			OFF	ON				
	90000			ON	ON				
	1					OFF			
	4					ON			
	5					OFF			
	10					ON			
	15					OFF			
	20					ON			

CLEAR  
TICKET UNIT

30
40
50
75
80
100
200
300
400
500

SERVICE IN  
EXCEPT 1

OFF			
ON	ON	ON	OFF
ON			
ON			
OFF			
ON			
OFF			
ON			
OFF			
ON			